

## Wall Safe Electronic Lock Operating Instructions -LG Combo Gard Lock-



### Operating Instructions

- Enter combination *Lock will signal when proper combination has been entered*
- Turn Keypad
- Open safe door

**\*Repeated beeping during an opening indicates that the Battery is low and should be replaced**

\*Invalid combination entry: Lock signals three times

\*Wrong try penalty entry of three consecutive invalid combinations will initiate a 5 minute lock out period, during which time the LED flashes red at 10 second intervals

### Changing Combination

*(Lock signals twice after each valid entry)*

\*Change combination with door open\*

- Enter six zeroes
- Enter existing combination
- Enter new six digit combination **TWICE**

### **\*Invalid Combination Entry**

Lock signals three times and old combination is still valid

### Changing Batteries

- Repeated beeping during an opening indicates that battery is low and needs immediate replacement.
- Remove battery cover from inside of safe door
- Replace battery with 9-volt Alkaline battery (Duracell only)

### **\*If batteries are too low to open safe door:**

- Hold new battery up to contacts on front of lock
- While holding battery up to contacts, enter combination and turn keypad to open safe