

BROWN SAFE

CHANGING BATTERIES - LA GARD 702 ELECTRONIC KEYPAD

When the batteries are **low** the unit will beep twice and flash red two times. The Batteries need to be replaced soon.

When the batteries are **critical** the unit will beep three times and flash red three times. The Batteries need to be replaced immediately to use the lock.

How to Replace Batteries:

1. Open the battery tray by depressing the release clip at the bottom of the lock.
2. Remove tray by pulling down to the right.
3. Replace the two 9-Volt batteries (use Duracell only).
4. Insert battery tray back into the keypad until you hear it "click" into place.

