Built To A Higher Standard



Brown Safe Manufacturing, Inc. 1081 Poinsettia Ave. Vista, CA 92081 Ph 760-233-2293 Fax 760-233-2297 www.BrownSafe.com

Wall Safe Electronic Lock Operating Instructions -LG Combo Gard Lock-

Operating Instructions

-Enter combination Lock will signal when proper combination has been entered -Turn Keypad

-Open safe door



*Repeated beeping during an opening indicates that the Battery is low and should be replaced

*Invalid combination entry: Lock signals three times

*Wrong try penalty entry of three consecutive invalid combinations will initiate a 5 minute lock out period, during which time the LED flashes red at 10 second intervals

Changing Combination

(Lock signals twice after each valid entry) *Change combination with door open* -Enter six zeroes -Enter existing combination -Enter new six digit combination **TWICE**

*Invalid Combination Entry

Lock signals three times and old combination is still valid

Changing Batteries

-Repeated beeping during an opening indicates that battery is low and needs immediate replacement.

-Remove battery cover from inside of safe door

-Replace battery with 9-volt Alkaline battery (Duracell only)

*If batteries are too low to open safe door:

-Hold new battery up to contacts on front of lock

-While holding battery up to contacts, enter combination and turn keypad to open safe