
Brown Safe Manufacturing, Inc.
285 Venture Street
San Marcos, CA 92078
Ph 760-233-2293 Fax 760-233-2297
www.BrownSafe.com

Wall Safe Installation Instructions

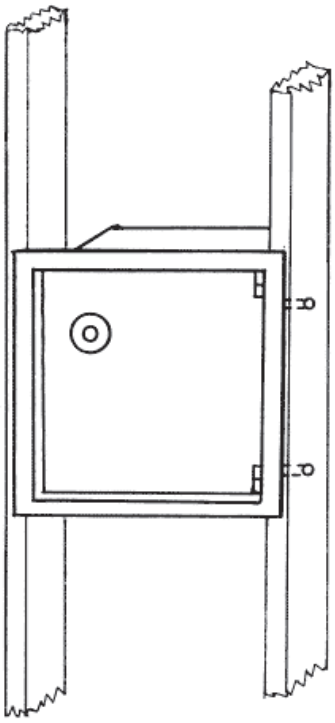

* Cut hole in wall slightly larger than exterior dimensions of the body of the safe.

* With safe door in closed position (but not locked) set safe in hole.

* Holding safe body in hole with one hand, open the safe door and mark position of all four holes.

* Close door and remove safe from hole. Drill marked holes in studs with small pilot drill.

* Reinsert safe into hole and install four bolts, starting with the bottom left bolt first, then proceed to the top right bolt. Then proceed with the last two bolts.

* Install shelf and any optional jewelry rack.

*** Test combination at least three times with the door locked in the open position before shutting and locking the safe door.**

Brown Safe Mfg. Inc © 2011